


THERMOMETER BULKHEAD FOR KETTLES

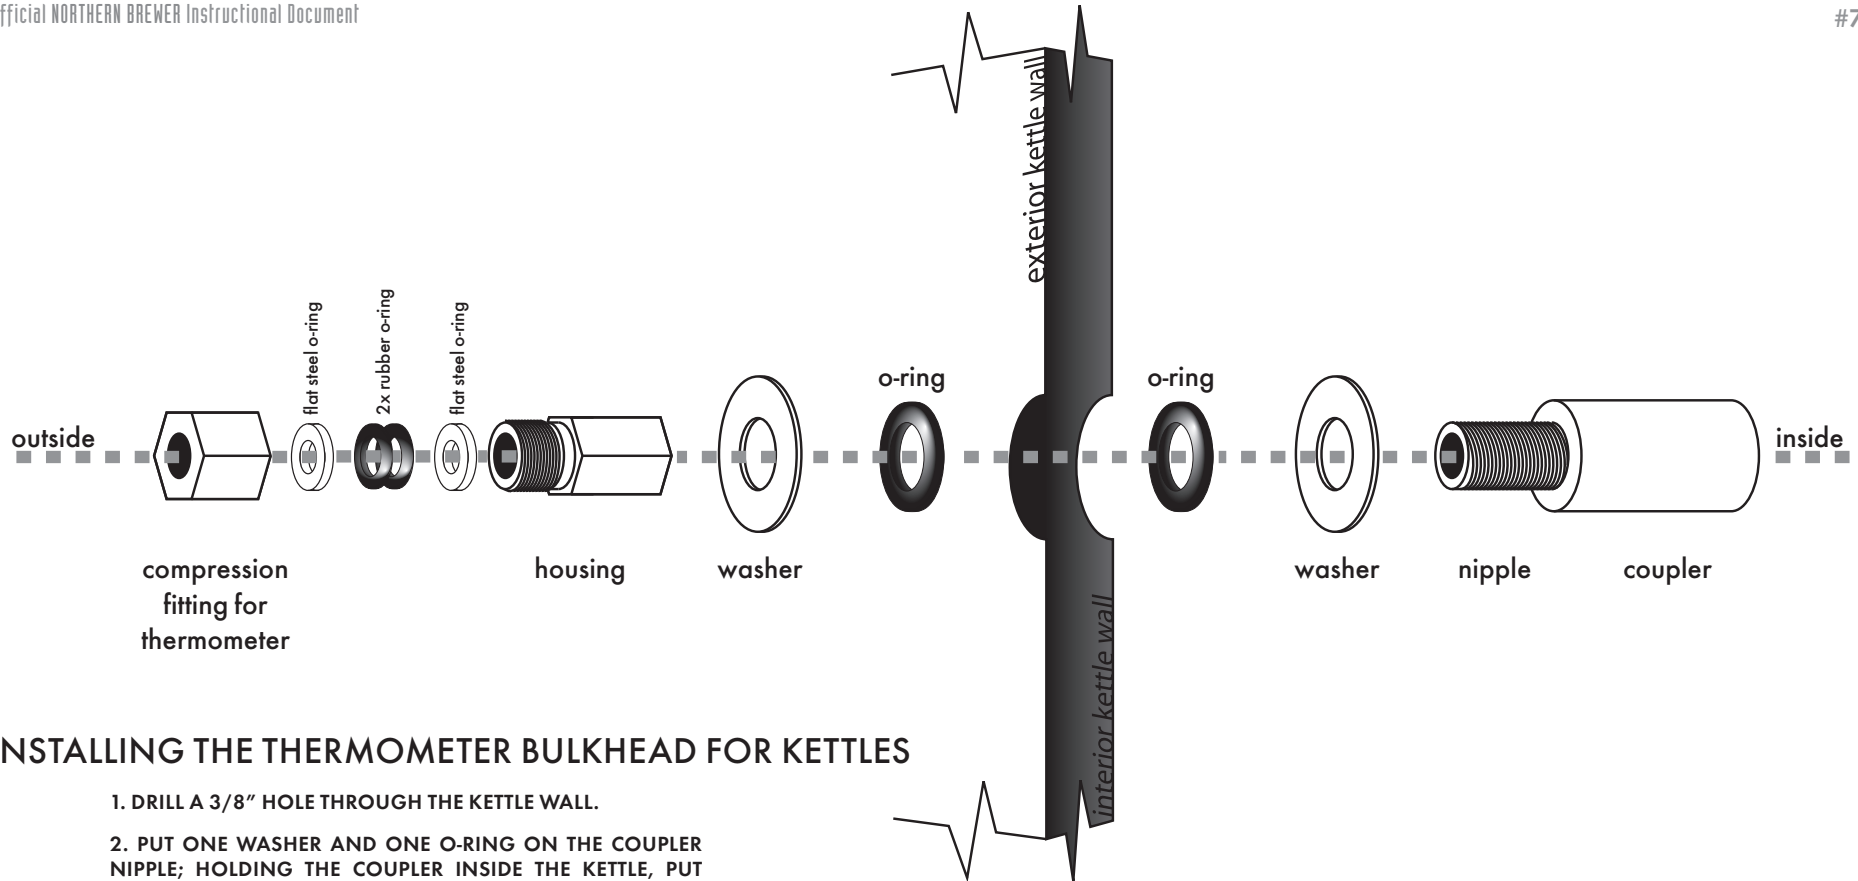

INSTALLING THE THERMOMETER BULKHEAD FOR KETTLES

1. DRILL A 3/8" HOLE THROUGH THE KETTLE WALL.
2. PUT ONE WASHER AND ONE O-RING ON THE COUPLER NIPPLE; HOLDING THE COUPLER INSIDE THE KETTLE, PUT THE NIPPLE THROUGH THE HOLE. THE O-RING SHOULD BE AGAINST THE KETTLE WALL.
3. PUT THE OTHER O-RING ON THE NIPPLE ON THE OUTSIDE OF THE KETTLE; PUSH IT AGAINST THE KETTLE WALL, AND THEN PUT THE OTHER WASHER ON THE NIPPLE.
4. THREAD THE COMPRESSION FITTING ONTO THE NIPPLE ON THE OUTSIDE OF THE KETTLE. Hold the coupler stationary inside the kettle with pliers and tighten the compression fitting from the outside until snug.
5. SLIP THE THERMOMETER STEM THROUGH THE COMPRESSION NUT AND THE SMALL WASHER AND O-RINGS. Omit the washer if the stem is larger than 3/16".
6. PASS THERMOMETER STEM THROUGH NIPPLE AND HAND TIGHTEN THE COMPRESSION NUT.